

Change Log musicbox XS firmware

Standard firmware V0.3.8b

V0.6.0

Changes compared to v0.3.8b

1. Voice indication for battery state implemented
 - a. Battery high= (100%-90%)
 - b. Battery medium= (89%-30%)
 - c. Battery low= (29%-1%)
2. Soft music fade in and out when pressing the mute button or powering down the musicbox.
3. Sound improvement
4. Feature for factory reset implemented. Every paired mobile device will be deleted. To execute the factory reset press and hold volume+, volume- and the Power button during normal operation till the unit shuts down.

V0.7.8

Changes compared to v0.6.0

Attention! With firmware versions from v0.7.8 it is necessary to use the software "CANTON mXS + mS FW update v2". If you have an older version of this software on your PC, please delete it and follow the instructions to download the above-mentioned version (see chapter "Downloading the musicbox update software").

1. Bass- and treble adjustment
operation
 - Press and hold the mute button till the voice indication „Bass“ is audible. Now you can adjust the bass level from -2dB to +2dB in 1dB steps. The adjustment will be confirmed by a voice indication.
 - Pressing the mute button once again you're able to adjust the treble. This will be confirmed by the voice indication treble. Now you can adjust the treble level according to the description above.
 - After three seconds without any button action the unit automatically will exit the menu.
2. Error that some Apt-x enabled devices do not or only temporarily use the Apt-x codec is fixed.