

Change Log musicbox S firmware

Standard firmware V0.1.9

V0.3.3

Changes compared to v0.1.9

Attention! With firmware versions from v0.3.3 it is necessary to use the software "CANTON mXS + mS FW update v2". If you have an older version of this software on your PC, please delete it and follow the instructions to download the above-mentioned version (see chapter "Downloading the musicbox update software").

1. Bass- and treble adjustment

operation

- Press and hold the mute button till the voice indication „Bass“ is audible. Now you can adjust the bass level from -2dB to +2dB in 1dB steps. The adjustment will be confirmed by a voice indication.
- Pressing the mute button once again you're able to adjust the treble. This will be confirmed by the voice indication treble. Now you can adjust the treble level according to the description above.
- After three seconds without any button action the unit automatically will exit the menu.

2. Error that some Apt-x enabled devices do not or only temporarily use the Apt-x codec is fixed.